

# TASCAM DR-07 recording checklist

(Recorders in the red bags, available in Magazine Center from Van Wyke)



Do you have:

- the recorder?
- the USB cord?
- the SD card?
- an external mic?
- headphones?
- extra double-A batteries?
- tripod?
- the windscreen? (black padded foam doo-hickey that fits over the mic)

**1. Set the date:** Menu > Date/Time

**2. Set the input settings:**

Input Setting > Input > Mic

Then ...

Mic settings:

Gain > Medium

Type > Mono

Power > On **This *must* be set to on if you are using an external mic**

Filter > Off. If outdoors with wind, however, you may want to adjust this.

**3. Plug in the mic.** Make sure it's turned on.

**4. Set the Recording Settings:**

Rec Setting:

Format > WAV 16 bit

Sample > 44.1k

Pre Rec > Off

Delay > Off

**5. Adjust the Recording Level**

Adjust the dial on the right side of the recorder, from 1 to 10.

As you record, watch the input levels on screen.

## 6. Record

Remember: You must hit **RECORD** twice until the red light is steady.

## 7. Play or Delete Files

Menu > Browse > Select File > Play (or Delete)